

URBANWORX

SUPPORT info@ayonz.com / **DISTRIBUTOR** Ayzon Pty Ltd

URBANWORX

A3 LAMINATOR

UXA3L

INSTRUCTION MANUAL



General Safety

Read this manual thoroughly before you start using the product.

Store this manual, the completed warranty card, your receipt and the product packaging. The safety precautions instructions reduces the risk of fire and injury when correctly complied to.

Please follow all instructions and take notice of all warnings.

To reduce the risk of injury:

- Keep out of reach of children.
- Do not allow metal objects to touch or pierce.

WARNING:

Be cautious when using you product as part of your active lifestyle. Always be aware of your surroundings to avoid injury to yourself and others.

- Safely keep this product and accessories out of the reach of children to prevent danger.
- Power off the product immediately when it is malfunctioning.
- Please do not disassemble the product. Otherwise, the product can not be returned or replaced.
- After laminating, the top of product will be still hot. Do not touch it to avoid burns.
- Recommended to use with Urbanworx UX25LS - A3 Laminator Pouch - 25 Pack.
- Do not expose the product to high-temperature and high-humidity environments, or do not expose to water to avoid short circuits which can cause the product to heat, smoke, deform, damage, or even explode.
- When you notice smoke or an odor from your product turn off the power immediately and take care to avoid burns.
- Do not use the product where there are Inflammable substances like gas stations and fuel warehouses.
- Do not insert anything into the machine other than laminating films and recommended items. The product is only designed to be used for laminating.

Usage and Cleaning

Use in accordance with below instructions:

- Do not use near any heat sources.
- Clean only with dry cloth.
- Do not allow this product to become wet. To reduce the risk of fire or shock, do not expose this product to rain or other types of moisture.

OPERATION

This product is operated by a switch, COLD / OFF / HOT located on the right side of appliance.

1. Plug the power cord plug into a power wall outlet.
2. **For Cold Lamination**
Switch the RIGHT side button position to COLD. The LED Light will become Blue. When the ready Light comes on, it is ready to use.
For Hot Lamination
Switch the RIGHT side button position to HOT. The LED light will become Blue. This product takes time to heat up, approximately 3-5 minutes. When ready the READY light will become ORANGE when the product is ready.
3. Prepare the laminating pouch for inserting into the laminator machine. Load the paper centrally into the laminator pouch alongside the pre-sealed edge.
DO NOT USE POUCHES THICKER THAN 250 MICROS (125 MICRO PER SIDE)
4. When machine is ready, you can start to inside the pouch with the paper content inside (centred) into the machine until it engages with the rollers.
NEVER INSERT A POUCH OPEN EDGE FIRST INTO THE MACHINE. IT MUST BE THE SEALED EDGE FIRST SO THE AIR CAN ESCAPE.
5. The pouch will move through the machine on its own until it exits at the rear.
6. Turn the RIGHT side button switch to OFF after finished using.

CAUTION!

DO NOT INSERT A POUCH OPEN EDGE FIRST INTO THE LAMINATOR. THE SEALED EDGE MUST ENTER THE LAMINATOR FIRST.

LAMINATOR JAM

1. Power off the laminator.
2. Slide the RELEASE button to the RIGHT position. (as shown to the right)
You will now be able to remove the laminator pouch.

