








 





# URBANWORX

SUPPORT info@ayonz.com / DISTRIBUTOR Ayonz Pty Ltd

## Function keys

	Functions	Keyboard
	return	ESC
	Home	F1
	Search	F2
	select all	F3
	copy	F4
	paste	F5
	Cut	F6
	previous	F7
	play/pause	F8
	Next	F9
	Volume down	F10
	Volume Up	F11
	screen lock	F12
Delete	delete	delete

# URBANWORX

## MULTI-DEVICE WIRELESS KEYBOARD

UX24DMM

## INSTRUCTION MANUAL

### General Safety

Read this manual thoroughly before you start using the product.

Store this manual, the completed warranty card, your receipt and the product packaging. The safety precautions instructions reduces the risk of fire and injury when correctly complied to.

Please follow all instructions and take notice of all warnings.

#### To reduce the risk of injury:

- Keep out of reach of children.
- Do not allow metal objects to touch or pierce.

#### CAUTION:

- Keep batteries out of reach of children.
- Do not heat, open, or dispose of batteries in fire.
- Do not mix new and old batteries or different types (for example, carbon-zinc and alkaline batteries).
- Do not allow metal objects to touch the battery on the device.
- Always remove batteries if they are old, weak or worn-out before storing your device for an extended period of time. Be sure to promptly recycle or dispose of the batteries in accordance with Local and National Disposal Regulations.
- If the batteries leak, immediately remove all batteries with care and keep the leaked fluid from touching your skin or clothes. If fluid comes in contact with your skin, immediately wash with water.

#### Do Not Attempt Repairs

Do not try to take apart, open, service or modify the product. Doing so could present the risk of electric shock or other hazard. Any evidence of any attempt to open and/or modify this device, including peeling, puncturing, or removal of any labels, will void the warranty provided with the product.

#### Choking Hazards

This device may contain small parts which may be a choking hazard to children under the age of 3. Keep small parts away from children.

#### Keep Away From Children

This device and its accessories are not toys. Do not allow small children to play with the device as they could hurt themselves or others and damage the device. Keep the device and all its parts away from children.

#### Battery-powered Device

Incorrect usage of batteries may result in battery leakage, overheating, or explosion. Released battery fluid is corrosive and can be toxic. It can cause skin and eye burns, and is very harmful if swallowed.

#### Heavy Objects

Do not use place heavy objects on keyboard as it will become damaged.

#### Incorrect use

Do not bend, twist or apply force to the keyboard, doing so will cause damage.

#### Do Not Use Near Water

Do not use this device near water and do not expose it to rain or moisture. If water spills on keyboard, do not attempt to dry device with hair dryer or microwave oven.

#### Usage and Cleaning

Use in accordance with below instructions:


- Do not use near any heat sources.
- Clean only with dry cloth.
- Do not allow this product to become wet. To reduce the risk of fire or shock, do not expose this product to rain or other types of moisture.

## SETUP



**Step 1** - On the back of the keyboard, insert 2 x AAA batteries into the battery compartment, making sure the polarities of the batteries match the battery compartment ( + / - ).  
- Slide the ON/OFF switch to ON (right side).

**Step 2** - You can use 3 of the following ways to connect to a device.


 
#### 1 - 2.4 GHz with Dongle

- Insert the USB Dongle into your device USB Port (laptop, PC, etc)
- Press and Hold **FN + (1) "2.4G"** keypad for up to 5 seconds.
- The  icon will stay lit.

#### 2 - Bluetooth Connectivity 5.0

- Press and Hold **FN + (2) "BT 5.0"** keypad for up to 5 seconds.
- The  icon will begin to flash rapidly.
- On your device (laptop, PC, etc), go into Bluetooth settings and search for **UX24DMM 5.0** and select it to connect.
- Follow the onscreen prompts and type the password display on the screen.
- When connected, the  icon will remain as a solid light.  
You can now start using the keyboard.

#### 3 - Bluetooth Connectivity 3.0

- Press and Hold **FN + (3) "BT 3.0"** keypad for up to 5 seconds.
- The  icon will begin to flash rapidly.
- On your device (laptop, PC, etc), go into Bluetooth settings and search for **UX24DMM 3.0** and select it to connect.
- Follow the onscreen prompts and type the password display on the screen.
- When connected, the  icon will remain as a solid light.  
You can now start using the keyboard.

**NOTE:** Can only connect to 1 device at a time.

**LOW POWER** - When battery becomes low, battery indicator will start flashing. When first turning on, the battery light will turn on for 2 seconds.

**AUTO POWER OFF** - When not in use for 15 minutes, the keyboard will go to sleep to save battery. Press and hold any button for 3 seconds to wake the keyboard up.