



20W BUG ZAPPER

UX20WBZ



INSTRUCTION MANUAL

Please read this manual carefully before using, and keep it for future reference.

CONTENTS

GENERAL SAFETY	3
INTRODUCTION	6
ATTENTION	7
WHERE AND HOW TO USE	8
HOW TO CHANGE ATTRACTANT	10
BULB REPLACEMENT	11
TROUBLESHOOTING	12
SERVICE	13
SPECIFICATION	13
CUSTOMER SUPPORT	Last Page

GENERAL SAFETY



Reading and storing the user manual

This user manual is part of the 20W Bug Zapper (hereinafter also called “device”). It contains important information on how to set up and use the device.

Before using the device, read the operating manual carefully, in particular the safety instructions. Failure to follow this operating manual may lead to severe injuries or product damage.

This user manual is based on the standards and regulations that are valid within the Australia. Outside the Australia, please also note the country-specific directives and laws.

Keep this operating manual for future reference. If you pass this device on to a third party, you must also supply this operating manual.

Proper use

This device is intended for private use only and is not suitable for commercial use. Use the device only as described in this operating manual. Any other use is improper and may lead to product damage or even personal injury. This device is not a toy. The manufacturer or retailer assume no liability for damage caused by improper or incorrect use.

IMPORTANT INFORMATION

- Do not temper or change or modify the product in any way.
- Only use Accessories outlined and recommended by the manufacturer.

1. This appliance is not to be used by persons including children with reduced physical, sensory or mental capabilities, or lack of of experience and knowledge, unless they have been given supervision or instruction.
Children being supervised not to play with the appliance.
2. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
3. WARNING : An electric shock hazard may exist if water from a garden hose is directed at the insect killer
4. When using extension cords, keep the socket-outlet away from moisture and avoid damage to the cord
5. the appliance is to be kept out of reach of children
6. the appliance is not to be used in locations where flammable vapour or explosive dust is likely to exist

INTRODUCTION



Thanks for purchasing our product. Please check the condition of the device before use. If the device is damaged, do not use it.

The device is environmentally safe and hygienic, smoke-free and nontoxic. It does not include pesticides. The built-in lamp is harmless to people, pets, or plants.

The highly efficient fitting tube emits special ultraviolet waves and attracts insects. Insects fly towards ultraviolet light and get electrocuted when they touch the electrified grid. The device is highly efficient and energy-saving. It is designed for continuous use and is ready to provide you with mosquito-free time for many years.

For optimal performance, please read this manual carefully before use.

ATTENTION



Do not use in flammable and/or explosive atmospheres.



Check the local voltage codes before installing.



Do not touch internal high voltage grids because of electric shock danger. Never put metal objects inside the net during use.



Hang or place the appliance out of the reach of children.



Never remove any fixed part of the appliance to make internal adjustments to avoid electric shock.



If the lamp starters or other parts of appliance are damaged, the manufacturer, its service agent or similarly qualified person must replace it in order to avoid hazard.



Clean the metal grid frequently. Unplug the appliance before cleaning. Use suitable brush to clean the high voltage grids and throw away the insects debris from the collection tray every week. Do not wash with water.



Avoid rough shaking that could damage the tube or its components.

WHERE AND HOW TO USE

INDOORS

The product can be used in bedroom, living room, hotel, restaurant, office, etc. The product has an energy-saving design and soft lighting, so it should not be used in high light conditions; otherwise, it will affect the device's effectiveness.


Here are some guidelines for using the device: for example, keep the house lighting off and use device before sleeping, or turn off all strong lighting for 10-20 minutes, or keep the product in the dark place while working.

Suggested suspension height: hang the device 3.9m high and 0.9ft away from walls.

WHERE AND HOW TO USE

OUTDOOR

1. Hang the insect killer 182cm to 243cm above the ground.
2. Place the unit 762cm away from the area intended for human activity.
3. Position the insect killer between the source of insects (woods, lowlands, etc.) and the area to be protected.
4. Plug cord into a compatible extension cord designed for outdoor use. The bulb(S) will emit a bluish glow with in a few seconds.

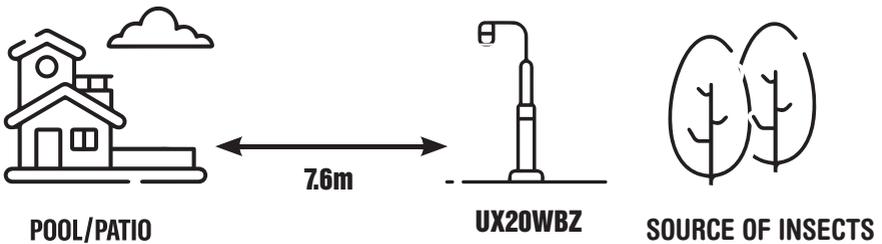

To increase the killing rate, please clean mosquitoes stuck in the grid. Please keep the power off, open the base, and use the metal bar with insulation to discharge the net, and after that, use soft brush to clean it.

HOW TO CHANGE ATTRACTANT(Optional)

Open the device base. Remove the attractant cartridge from the sealed pouch and remove the protective cover from the face of the cartridge. Avoid touching the openings in the cartridge and always wash your hands thoroughly after contact. For best results replace the cartridge every 30 days.




Place the attractant at the spot marked in red on the picture below. Wash hands thoroughly after handling.

AFTER SKIN CONTACT: Wash with plenty of soap and water. If skin irritation occurs: consult a doctor.

AFTER EYE CONTACT: Rinse thoroughly with water for several minutes. Remove contact lenses if present and it is easy to do. Continue rinsing. Immediately call a POISON CENTER or doctor/physician.

AFTER SWALLOWING: Rinse out mouth with water. Call a POISON CENTER/doctor if you feel unwell

BULB REPLACEMENT

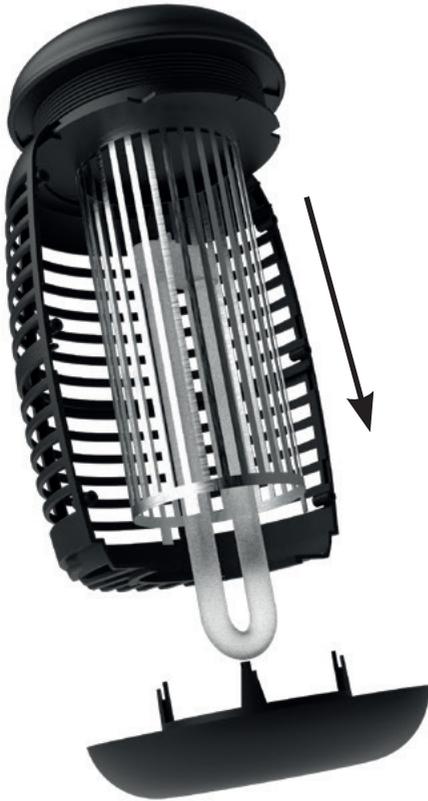

1. Disconnect the unit from the electric source.
2. Open the lamp by twisting the bottom tray in accordance with the arrows on it.
3. Use a screwdriver to remove the screw that holds the plastic gate.
4. Now the bulb can be pulled out of its socket.
5. Insert the replacement bulb into the socket.
6. Mount all parts back.

NOTE: THE LAMP CAN ONLY BE REPLACED BY QUALIFIED SERVICE PERSON.

Notice: Ultraviolet or <black light> is invisible to the eye, and its ability to attract insects diminishes over time. Therefore, although the bulb appears to be functioning, it should be replaced every season to maintain optimal “black light” efficiency.

TROUBLESHOOTING

Problem	Possible Cause	Correction
<p>The light is off and there is no high voltage on the grid</p>	<ol style="list-style-type: none"> 1. There is no electricity. 2. The lamp is not installed correctly 3. The starter is faulty. 4. The burnt out bulb. 	<ol style="list-style-type: none"> 1. Check fuse or circuit breaker. Check extension cord. 2. Check all sockets for proper fit and alignment. 3. Starter replacement by manufacturer is required. 4. Replace the light bulb.
<p>The light is on, but there is no high voltage on the grid.</p>	<ol style="list-style-type: none"> 1. Shorted grids. 2. The transformer is defective. 	<ol style="list-style-type: none"> 1. Examine the grid and clean it using an air blower. 2. Replacement by manufacturer is required.
<p>Intermittent or continuous sparking between grid rods.</p>	<ol style="list-style-type: none"> 1. The gap between grid rods is too small. 2. The grid is clogged with foreign material. 	<ol style="list-style-type: none"> 1. Unplug the unit and adjust grids by bending them back into alignment. 2. Clean the grid using an air blower.
<p>The light is on, but no longer attracts insects.</p>	<p>The invisible power of blacklight is reduced due to the age of the lamp.</p> <ol style="list-style-type: none"> 2 Attractant bait is no longer effective. 	<ol style="list-style-type: none"> 1. Replace the bulb. See bulb replacement section in the user manual. 2. Replace the attractant cartridge.

SERVICE

If your products stops working, contact our call centre at info@ayonz.com.

Do not attempt to open and repair the unit yourself.

SPECIFICATIONS

Power Supply	220-240V~ 50Hz 20W
Weights	840g
Dimensions	161x161x276mm

THIS PAGE IS LEFT
BLANK ON PURPOSE.

THIS PAGE IS LEFT
BLANK ON PURPOSE.



URBANWORX

CUSTOMER HELPLINE:

info@ayonz.com

DISTRIBUTED BY:

Ayonz Pty Ltd