

## OUTSIDE - FRONT (1) & BACK (4)

**PRODUCT OVERVIEW**



VENTED TEMPERED GLASS LID

0.75L PAN WITH STAY COOL HANDLE

1.3M POWER CORD WITH 20A IN LINE FUSE

NON-SLIP FEET

12V PLUG

12V CONNECTING LEAD & CIGARETTE LIGHTER PLUG

**URBANWORX**

# 12V PORTABLE FRYPAN

## INSTRUCTION MANUAL

UX12VFP-2



**SUITABLE FOR:**

TRUCK COACH RV CARAVAN

## INSIDE - LEFT (2) & RIGHT (3)

### GENERAL SAFETY

Read this manual thoroughly before you start using the product.

Store this manual, the completed warranty card, your receipt and the product packaging. The safety precautions instructions reduces the risk of fire and injury when correctly complied to.

Please follow all instructions and take notice of all warnings.

**WARNING: USE ONLY WITH 12V POWER SOCKET. DO NOT USE FRYPAN WHILST DRIVING**

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- The appliance is only to be used with the power supply unit provided with the appliance shall state that it must only be supplied at safety extra low voltage corresponding to the marking on the appliance
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance is not intended to be operated by means of an external timer or a separate remote-control system.
- This appliance must not be immersed.

### CAUTION:

- Never leave appliance unattended or plugged in.
- Do not operate the frypan on an inclined plane.
- Do not move while the frypan is switched on.
- **HOT!** - Wait for the product to completely cool before attempting to clean.

**CAUTION:** To prevent damage to the appliance do not use alkaline cleaning agents when cleaning, use a soft cloth and a mild detergent.

### HOW TO USE

1. Make sure to place frypan on a flat, level surface.
2. Never plug unit in empty. Place in food contents/ingredients.
3. Plug in the 12V adaptor (cigarette Lighter) and the frypan will heat up.
4. Always disconnect frypan when not in use.
5. Always use plastic or wood utensils so the surface does not get scratched or damaged.

### Storage:

Please put in the dryness place when you do not use it in long time.

### Cleaning:

1. Always ensure product is disconnected before cleaning.  
WAIT FOR IT TO COMPLETELY COOL BEFORE CLEANING.
2. Wipe the outer surfaces with a soft, damp cloth when the product is cooled, and try as necessary.

### HEATING:

This product as powered by a 12V adaptor, due to low voltage will take longer to heat the product. (up to 5 Minutes).

This product uses low voltage (12V Power). Due to the low voltage, the product will take longer to heat



**SUPPORT** [info@ayonz.com](mailto:info@ayonz.com) / **DISTRIBUTOR** Ayonz Pty Ltd