

URBANWORX

PORTABLE USB BLENDER

UUB-8B



INSTRUCTION MANUAL

Please read this manual carefully before using, and keep it for future reference.

CONTENTS

General Safety	4
Before first use	6
Product Overview	7
Basic Operation	8
Cleaning	9
Specification	10
Customer Support	Last Page

GENERAL SAFETY

Read this manual thoroughly before you start using the blender.

Store this manual, the completed warranty card, your receipt and the product packaging.

The safety precautions instructions reduces the risk of fire, electric shock and injury when correctly complied to.

Please follow all instructions and take notice of all warnings.

IMPORTANT INFORMATION

- Do not expose this product to rain or moisture.
- Do not temper or change or modify the product in any way.
- Only use Accessories outlined and recommended by the manufacturer.
- Please do not expose the product to splashing or water contact

- The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the product. Dry location use only.
- No naked flame source, such as candles, should be placed on the product.
- This appliance is not to be used by persons (including children) with reduced physical, sensor or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
Children being supervised not to play with the appliance.
- Do not place the base of the blender into water to wash it. This product is not waterproof and will damage the product if not handled correctly.

GENERAL SAFETY (CONT.)

- If you notice any unusual odors or smoke around the unit, immediately turn off the device and contact the service center. Failure to do so may result in fire or electric shock.
- Please beware that Dust could accumulate over time on the unit and cause it to generate heat and or deteriorate insulation, which in turn may result in an electrical fire.
- To maintain the product do not use any chemical or cleaning agent or wet cloth, please only ensure to utilize a dry cloth to wipe it down from marks or dust and only after unplugging the product from the power socket.
- Please ensure to contact our call center for any repair or service required for the products.

Please make sure upon positioning this product, the place is:

- Not wet or damp and Well ventilated
- Away from direct sunlight or heaters.
- Away from splashes or food.
- Protected from excessive dust or grease.
- Do not place the Product near heat sources such as radiators, stoves or other audio visual equipment that produce heat.
- Do not place small metallic objects on top of the unit.
- Do not use or store flammable or combustible materials near the unit. Doing so may result in fire or explosion. Do not place any naked flame sources, such as lit candles, cigarettes or incense sticks on top of the product.

GENERAL SAFETY (CONT.)

Before first use

- Unpack the product and accessories and ensure all parts of the product are undamaged and in good working order.
- Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach and disposed of safely.
- Unwind the USB cord to its full length and inspect it for damage before each use. Do not use the product if it or its cord has been damaged or is not working properly. In case of damage, contact our after sales support line for advice on examination, repair or return of the damaged product.
- Ensure the product is not exposed to direct sunlight or placed near a heater or other heat source.

WARNING

- Make sure children do not use this product.
- When unscrewing the container from the blender base, make sure to place the base with the blades in a safe area, out of reach from person(s) or children. The blades are sharp and will cause harm if not handled carefully.
- The container is separate from the blender base with blades, **DO NOT** unscrew the container while in use upright. Make sure to turn blender upside down before unscrewing the container, otherwise the contents will spill.

MAGNETIC SAFETY DESIGN

This product has a magnetic safety design, when the container is not attached to the base of the blender, the device will not power on.

PRODUCT OVERVIEW



BASIC OPERATION

FIRST TIME USE

- Make sure the blender is charged before using for the first time.
1. Unscrew the lid and place your ingredients into the blender.
 - Make sure to tighten the lid so that it does not leak.
 2. Press the power button to turn on the blender.
 - Wait until you are satisfied with the blended contents inside.
 - Press the power button again to turn off the device.
 3. Open the top transparent lid and drink your blended drink!

Note: The blender will only spin for 40 seconds before automatically turning off.

DO NOT (PRODUCT)

- Do not place too much contents inside the blender.
- Completely filling the blender container (high load) then blending the contents may cause damage to the product mechanisms inside the base of the blender which will then reduce the durability of the product over a period of time.

DO NOT (CLEANING)

- Do not disinfect accessories of the product or clean with hot water.
- Do not wash it with steel/mesh sponge.
- Do not clean with any corrosive cleaners,
- Do not place in the dishwasher



CLEANING

CLEANING (Option 1)

- Once you have completely finished your drink, you can action the following steps to clean your blender.
1. Unscrew the lid.
 2. Fill the container with water.
 3. Turn on the blender for 10 seconds (press power button again to turn off) to clean inside the container and the blades.
- If inside blender and blades still not clean, repeat this a few times other please follow option 2 below.



CLEANING (Option 2)

- Once you have completely finished your drink, you can action the following steps to clean your blender.
 - Make sure the transparent lid at the top is closed before you turn it upside down.
4. Turn the blender upside down.
 5. Unscrew the container body from the base of the blender.
 6. You can now wash and rinse the container body and blade on the base of the blender.

NOTE: Please be careful when cleaning the blades, they are sharp and will cut you if not handled carefully.



INFORMATION

Troubleshooting

If your products stops working, contact our call centre at info@ayonz.com.

Do not attempt to open and repair the unit yourself.

SPECIFICATIONS

Li-ion Battery	1800mAh * 2
Input	DC 5V/1A
Weights	Net: 0.5 kg / Gross: 0.6 kg
Dimensions	86 (w) x 86 (d) x 230 (h) mm

URBANWORX

CUSTOMER HELPLINE:

info@ayonz.com

DISTRIBUTED BY:

Ayonz Pty Ltd