

# URBANWORX

## **HEATED BACK & SEAT MASSAGER**

UXBASMLCD



# **INSTRUCTION MANUAL**

Please read this manual carefully before using, and keep it for future reference.



# CONTENTS

---

General Safety	4
Before first use	6
Product Overview	7
Basic Operation	8
Setup	9
Information	10
Specification	11
Customer Support	Last Page

---

# GENERAL SAFETY

Read this manual thoroughly before you start using the product.

Store this manual, the completed warranty card, your receipt and the product packaging.

The safety precautions instructions reduces the risk of fire, electric shock and injury when correctly complied to.

Please follow all instructions and take notice of all warnings.

## IMPORTANT INFORMATION

- Do not expose this product to rain or moisture as it may result in fire.
- Do not temper or change or modify the product in any way.
- Only use Accessories outlined and recommended by the manufacturer.
- Please do not expose the product to splashing or water contact

- The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the product. Dry location use only.
- No naked flame source, such as candles, should be placed on the product.

# GENERAL SAFETY (CONT.)

- If you notice any unusual odors or smoke around the unit, immediately disconnect the unit from the power source and contact the service center. Failure to do so may result in fire or electric shock.
- When not using the unit for long periods of time or when you are moving the unit. Please disconnect the product from main power.
- Please beware that Dust could accumulate over time on the unit and cause it to generate heat and or deteriorate insulation, which in turn may result in an electrical fire.
- The product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or young children of any age, They must be supervised product by a person responsible for their safety.
- To maintain the product do not use any chemical or cleaning agent or wet cloth, please only ensure to utilize a dry cloth to wipe it down from marks or dust and only after unplugging the product from the power socket.
- Please ensure to contact our call center for any repair or service required for the products.

**Please make sure upon positioning this product, the place is:**

- Not wet or damp and Well ventilated
- Away from direct sunlight or heaters.
- Away from splashes or food.
- Protected from excessive dust or grease.
- Do not place small metallic objects on top of the unit.
- Do not use or store flammable or combustible materials near the unit. Doing so may result in fire or explosion. Do not place any naked flame sources, such as lit candles, cigarettes or incense sticks on top of the product.

# GENERAL SAFETY (CONT.)

## Before first use

- Unpack the product and accessories and ensure all parts of the product are undamaged and in good working order.
- Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach and disposed of safely.
- Unwind the power adaptor cord to its full length and inspect it for damage before each use. Do not use the product if it or its cord has been damaged or is not working properly. In case of damage, contact our after sales support line for advice on examination, repair or return of the damaged product.
- Do not use the massager in a bathroom or a similarly humid area as such an environment may reduce the lifespan of the massager mechanism.
- Ensure the massager is not exposed to direct sunlight or placed near a heater or other heat source.
- Your massager comes pre-assembled, so you can plug it in and use it straight away.

## Consult your doctor prior to using if:

- you are pregnant
- you have a cardiac pacemaker, artificial joints or electronic implants
- you suffer from one or more of the following illnesses and complaints: circulation disorders, varicose veins, open wounds, bruises, broken skin, inflammation of the veins, skin eruptions.


## Do not use this product:

- To supplement or replace medical treatment. Chronic complaints and symptoms may be made worse.
- If you have circulatory problems or on areas sensitive to heat. Risk of burning!


## CAUTION!

- This product is a non-professional appliance designed to provide a soothing massage. Do not use this product as a substitute for medical attention. If you have any concerns regarding your health, consult your doctor before using the product.
- Never use this massager if you suffer from any physical ailment that would limit your capacity to operate the controls or if you have sensory deficiencies.
- The appliance has a heated surface. Persons insensitive to heat must be careful when using the appliance.

# PRODUCT OVERVIEW

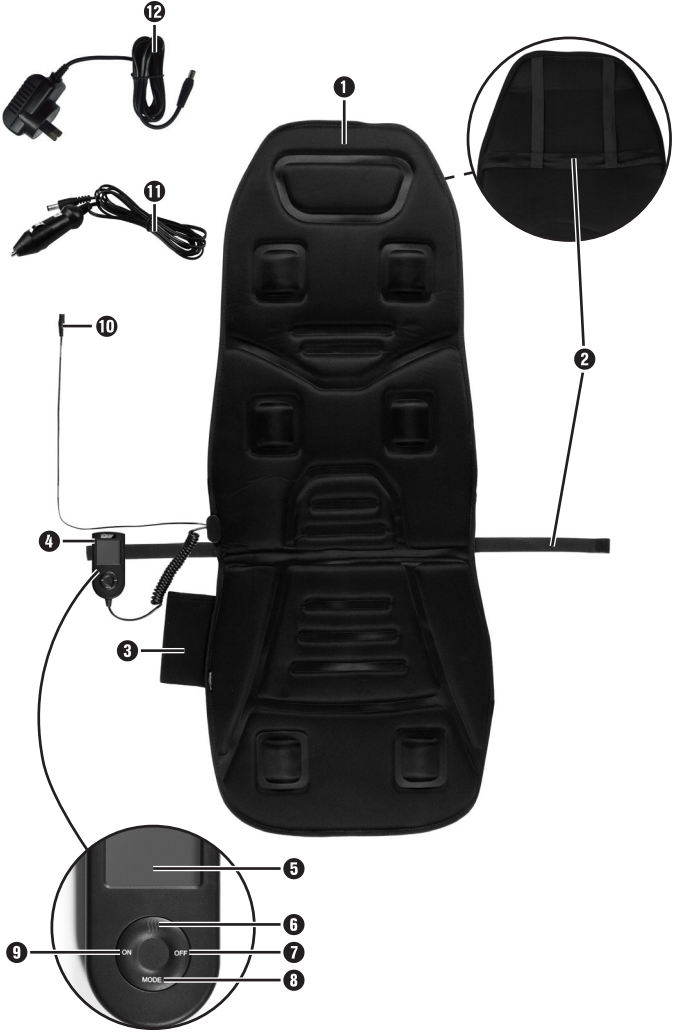

- 1. Seat Cushion
- 2. Securing Straps
- 3. Storage Case
- 4. Remote Control

- 5. Display
- 6.  Button
- 7. OFF Button
- 8. MODE Button

- 9. ON Button
- 10. Connector Socket
- 11. 12V Car Adapter
- 12. Mains Adapter

# BASIC OPERATION


- This product is suitable for massaging your back or neck as indicated on the giftbox.

## Massage areas



### Automatic shut-off


For safety purposes, the back & seat massager will shut off automatically after the set timer (30 minutes).

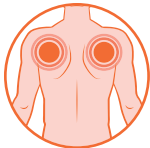

UPPER BACK



HIPS

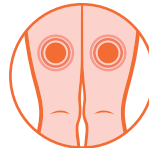

THIGHS



# SETUP

## Setting up the back & seat massager

This massage seat has a unique strapping system which allows you to fasten it to most chairs or car seats. Set the cushion in your seat and slip the elastic straps over the back of the seat so your massage seat will not move around.

- When using the massage seat **at home or in the office**, plug the receptacle end of the AC adaptor into the input socket, which is located about 40cm up the cord. Then plug the AC adaptor into a 240V AC indoor wall outlet. Attach the massage cushion to any chair for a luxurious massage as you read, rest or work.
- When using the massage seat **in the car**, plug the receptacle end of the AC adaptor into the input socket, which is located about 40cm up the cord. Then plug the 12V car adaptor into a lighter outlet. Slip the massage cushion straps over your seat to enjoy a relaxing massage in your car.

### NOTE:

- Do not set up or use the back & seat massager in a bathroom or similarly wet/damp area, as such an environment may reduce the lifespan of the massager mechanism.
- Ensure the massager is not exposed to direct sunlight or placed near heaters and other heat sources.
- Do not use the product on any wooden surface as the zipper may scratch the surface.

# INFORMATION

## Maintenance

- Product is easy to clean. Store it in its original box or within storage container to keep dust accumulation to a minimum.
- Remove dust with a vacuum cleaner or duster.
- Never use cleaners chemicals, hard brushes.

## CAUTION!


- Disconnect from the power supply before cleaning.
- Do not allow water or any other liquids to come into contact with the unit.
- Do not clean with any liquids.

## Troubleshooting

If your product stops working, make sure the power adaptor is properly connected. If unit is still not working, contact our call centre at [info@ayonz.com](mailto:info@ayonz.com).

**Do not attempt to open and repair the unit yourself.**

# SPECIFICATIONS

<b>Rated power</b>	12 W (approx.)
<b>Input voltage and current (adaptor output)</b>	12V  1A
<b>Weights</b>	Net: 1.14 kg Gross: 1.6kg

This appliance has been fully tested and meets all requirements as set out by standards AS/NZS 60335.1 and AS/NZS 60335.2.32 for electrical safety.

# URBANWORX

**CUSTOMER HELPLINE:**

[info@ayonz.com](mailto:info@ayonz.com)

**DISTRIBUTED BY:**

Ayonz Pty Ltd